


# CONTROL JOINT DETAIL:

Spalled Joint Repair (3" up to 12" in Width) Using  
RepCon 928/928 FS or SpecPoxy Mortar with Rapid Flex




**3" to 12"**

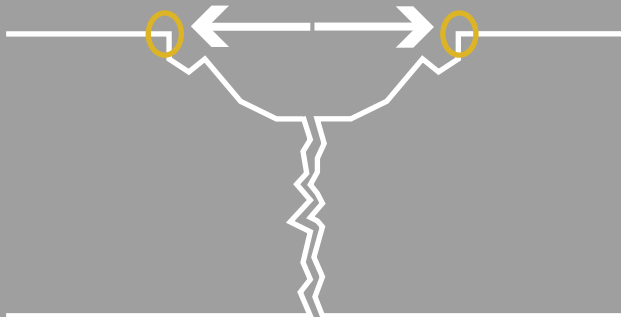

## EXISTING CONDITION:

severely spalled interior joints  
from 3" to 12" width.

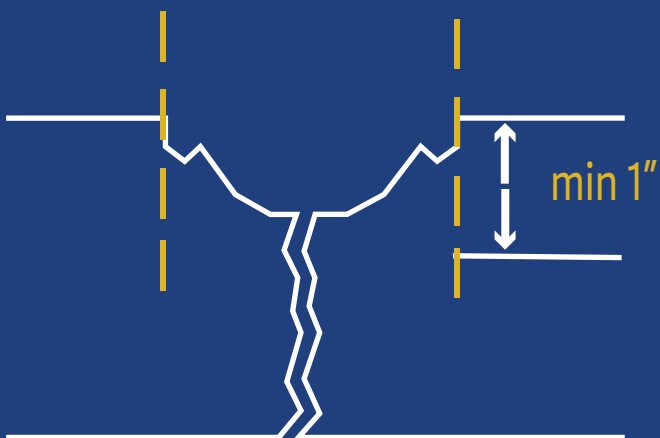


## STEP ONE:

Saw cut straight down min 1" deep behind  
spalled edges using concrete saw.


# Control Joint DETAIL:

Spalled Joint Repair (3" up to 12" in Width) Using  
RepCon 928/928 FS or SpecPoxy Mortar with Rapid Flex

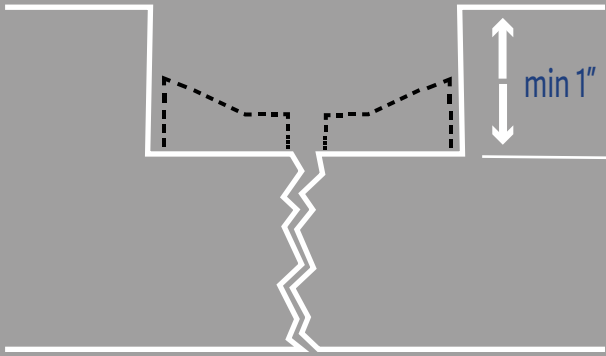


## STEP TWO:

Remove any high spots between new saw cut edges and existing joint with chisel or similar tool to establish shelf. Vacuum clean.

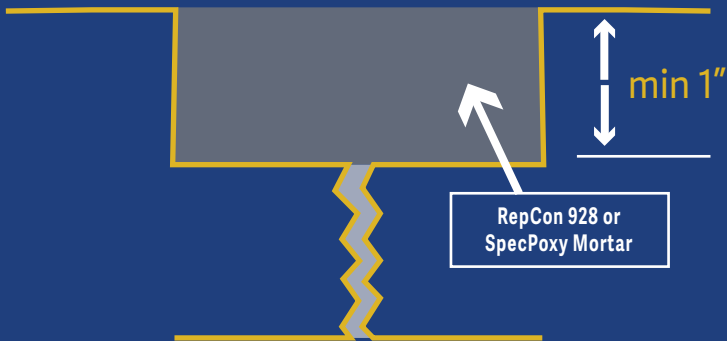

## STEP THREE:

Properly mix and place the repair mortar per the manufacturer written instructions flush with existing floor.

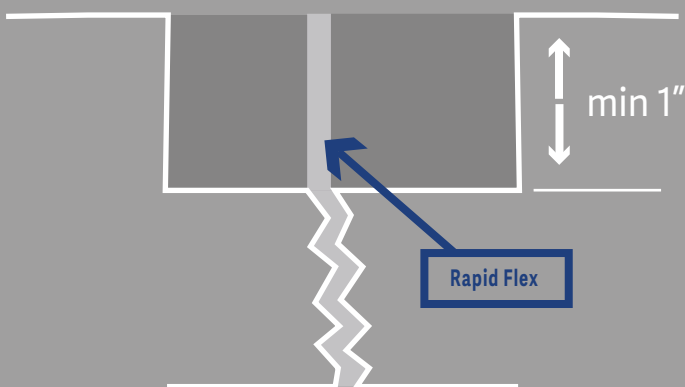

## STEP FOUR:

Recut the joint through repair mortar, aligned with existing joint. Thoroughly clean and refill full depth with Rapid Flex per manufacturer instructions.